

SC 2121


INSTALLATION INSTRUCTIONS

MR. CARPENTER:
PLEASE SAVE THESE
INSTRUCTIONS
FOR HOMEOWNER.

Please Hand Tighten • If Your Set Comes with Key, Remove Key Before Installation

FRAME STRIKE:

INSTALL STRIKE ON DOOR JAMB WITH TWO SCREWS. AFTER DOOR ROLLERS ARE ADJUSTED, ADJUST STRIKE FOR PROPER LATCH ENGAGEMENT.

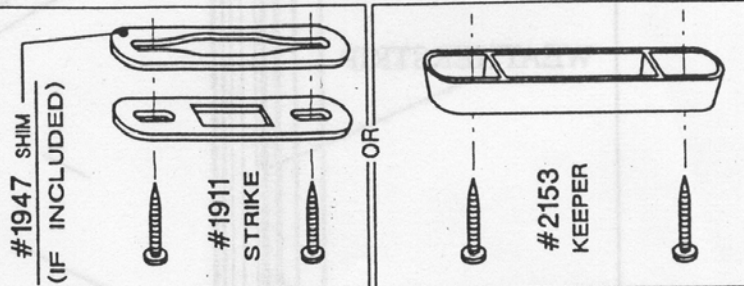

NOTE:

LATCH MUST ALWAYS ENGAGE UPWARD

#1963 PULL

LATCH ADJUSTMENT:

AFTER DOOR AND STRIKE ARE ALIGNED, IN AND OUT ADJUSTMENT MAY BE MADE BY TURNING LATCH SCREW.

HANDLE AND PULL INSTALLATION:

INSERT TURN LEVER TAIL INTO DOOR LATCH HUB SLOT. PLACE THE INTERIOR AND EXTERIOR HANDLE ASSEMBLIES ON DOOR WITH HANDGRIP TOWARDS GLASS. INSTALL THE TWO LONG SCREWS THROUGH HANDLES AND TIGHTEN.

#1942 TURN LEVER

#1430 KEYLOCK CYLINDER (OPTIONAL)

#1943 BASE

